



1. Roof Details

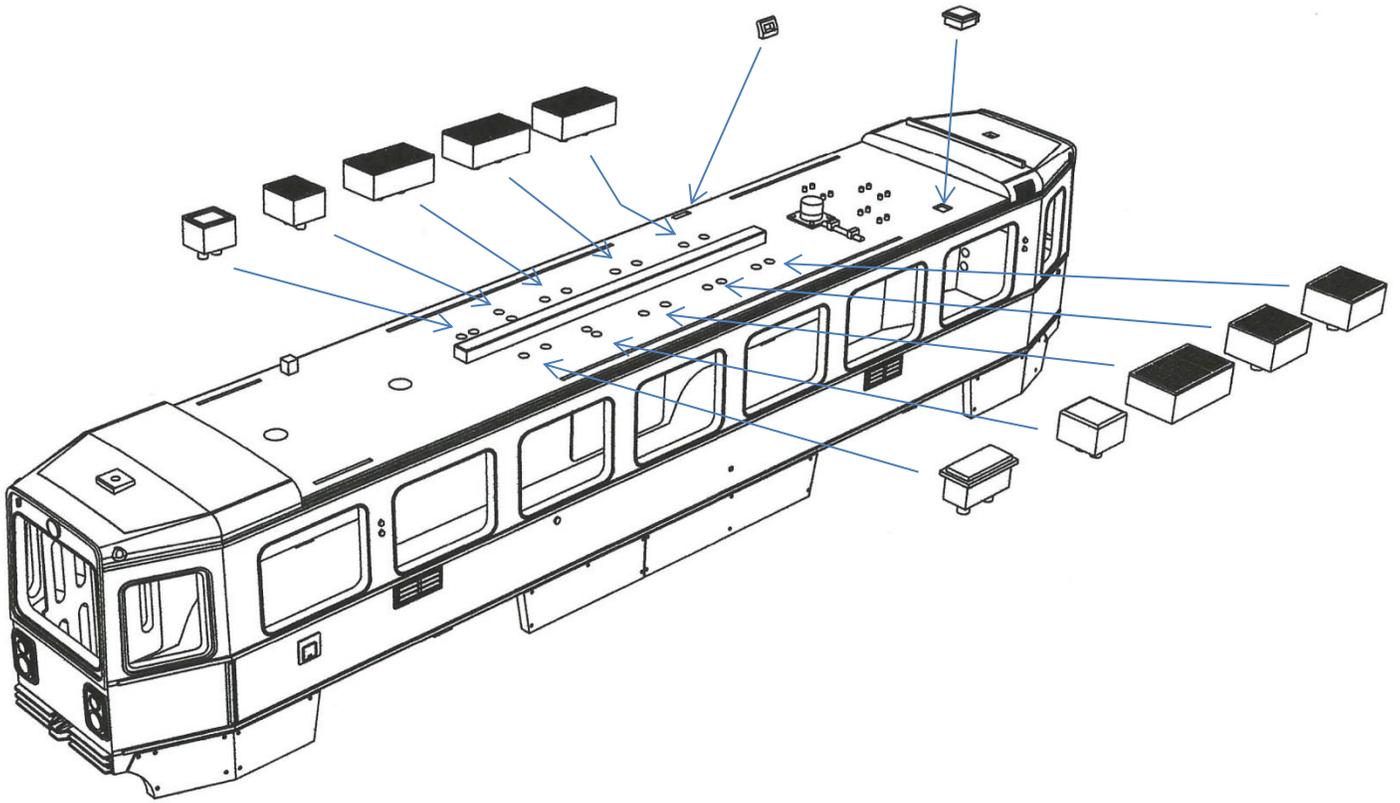


2. Pole, Hook and Help Light


Note that hook opening faces right side of car

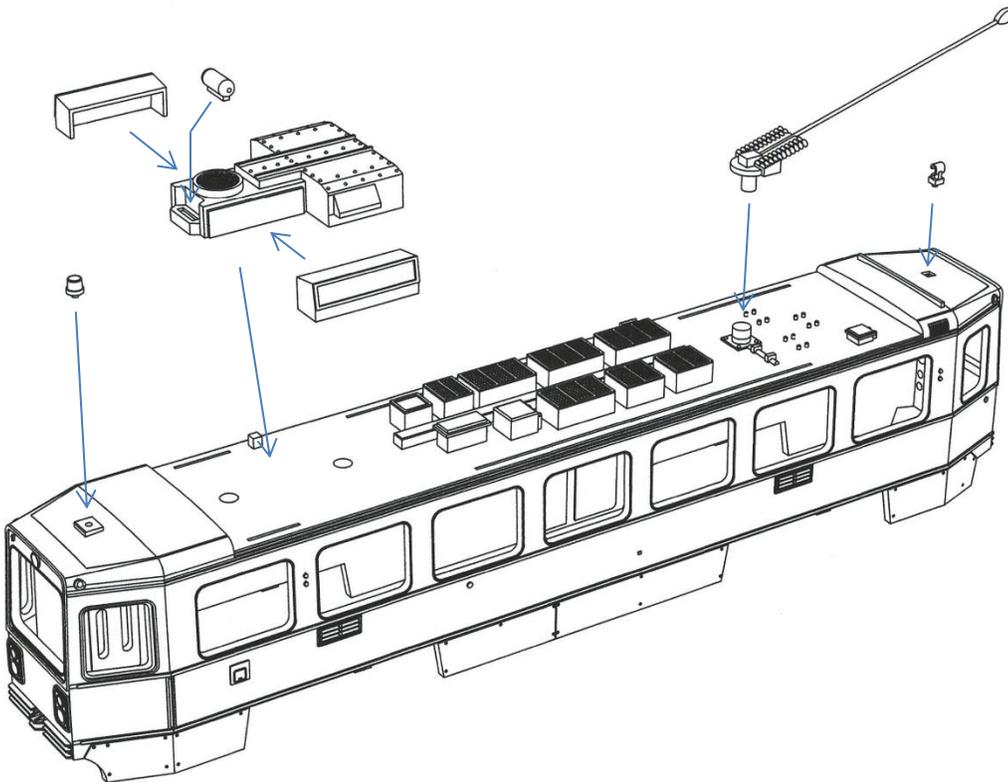

3. Roof Fairings

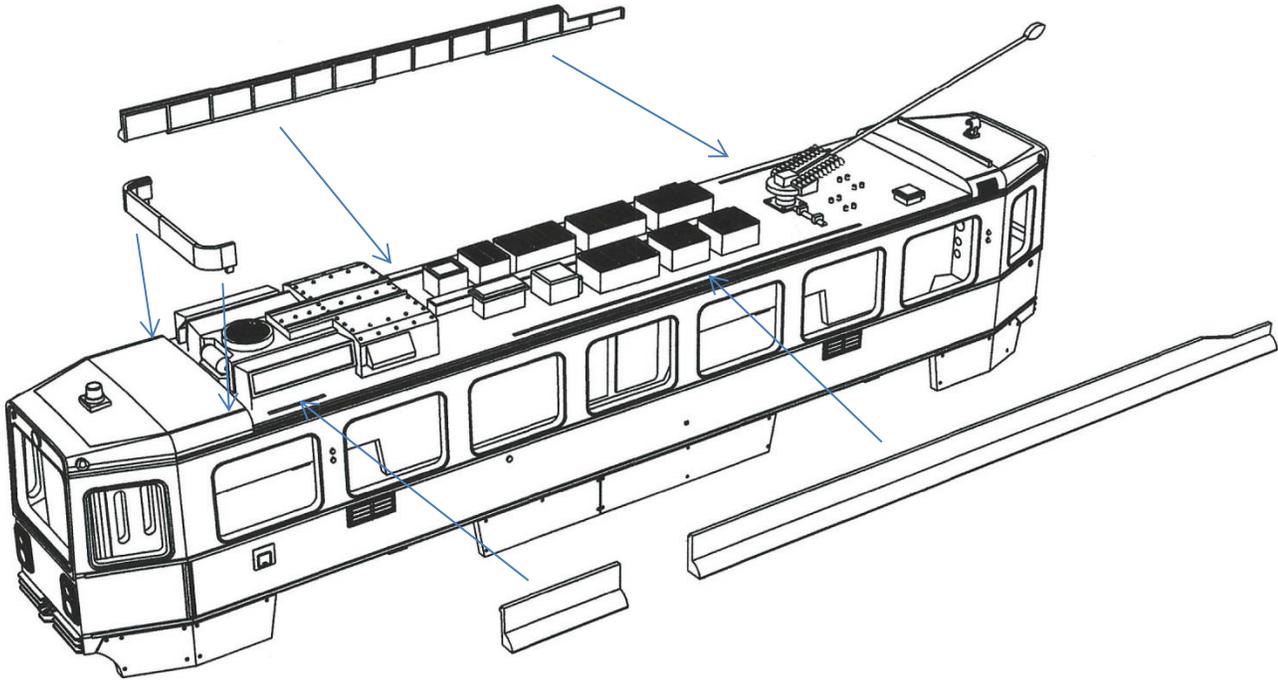


4. Window Glass Install from inside, cementing is not necessary. Be sure to remove all ejector pin marks from parts.

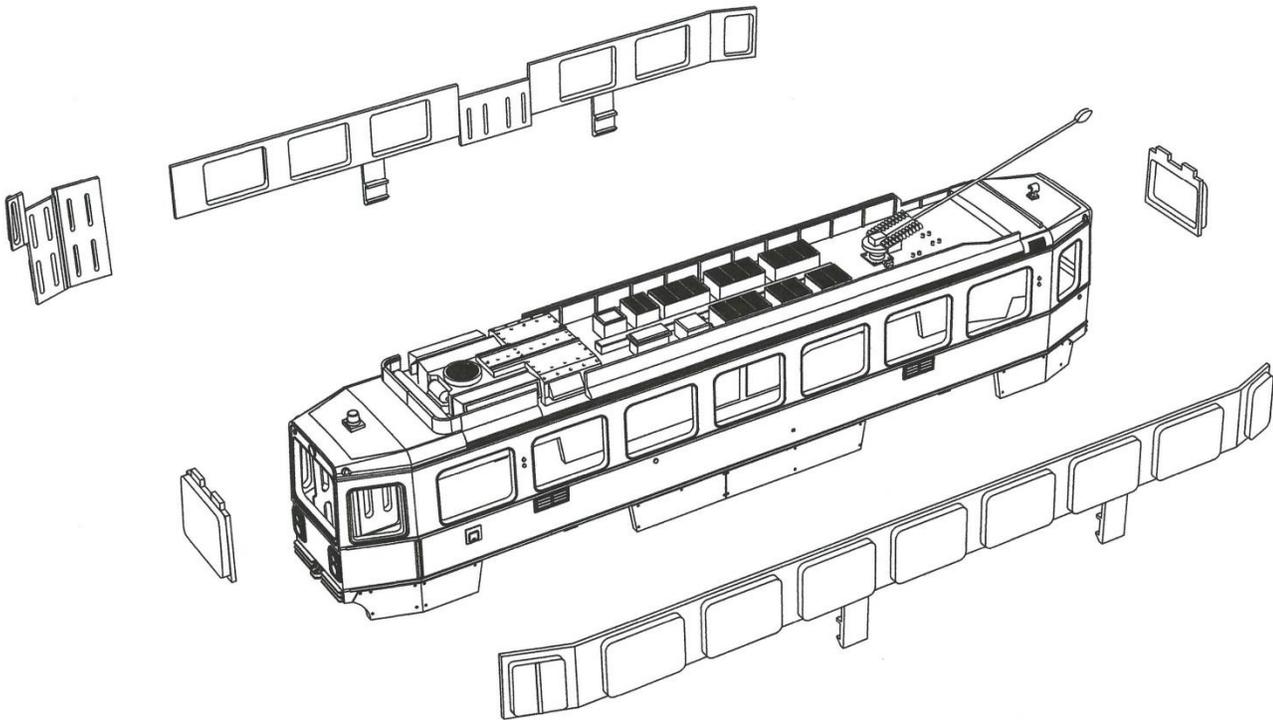


Install windows in this order: End pieces first, then front door, then sides.


5. Headlight and Taillight Lenses

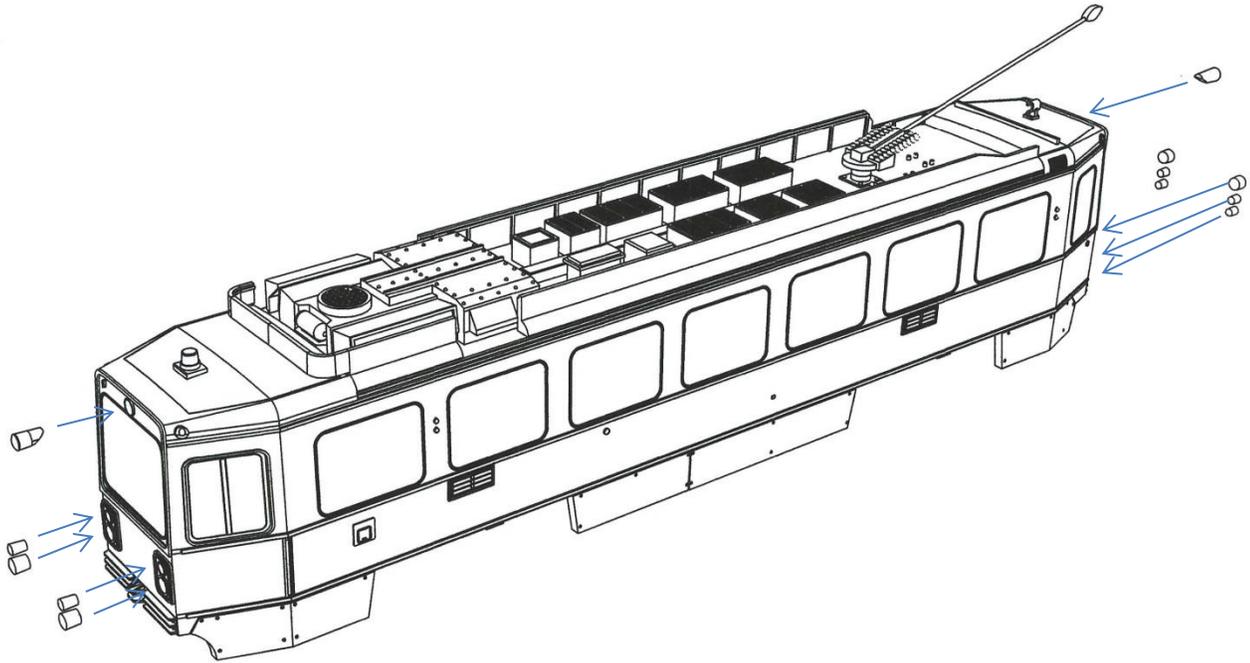

6. Display Frame

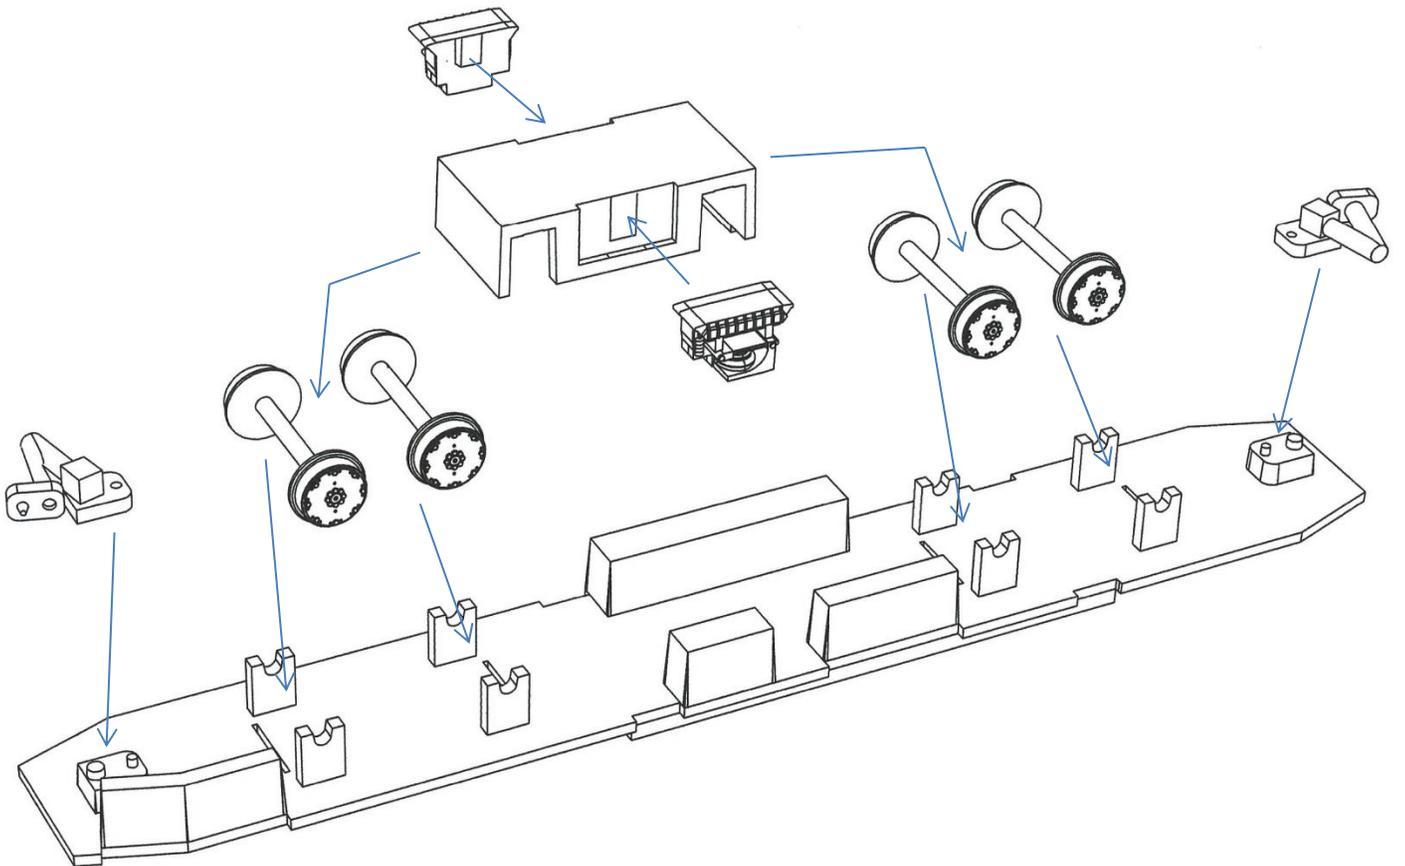

7. Final Assembly

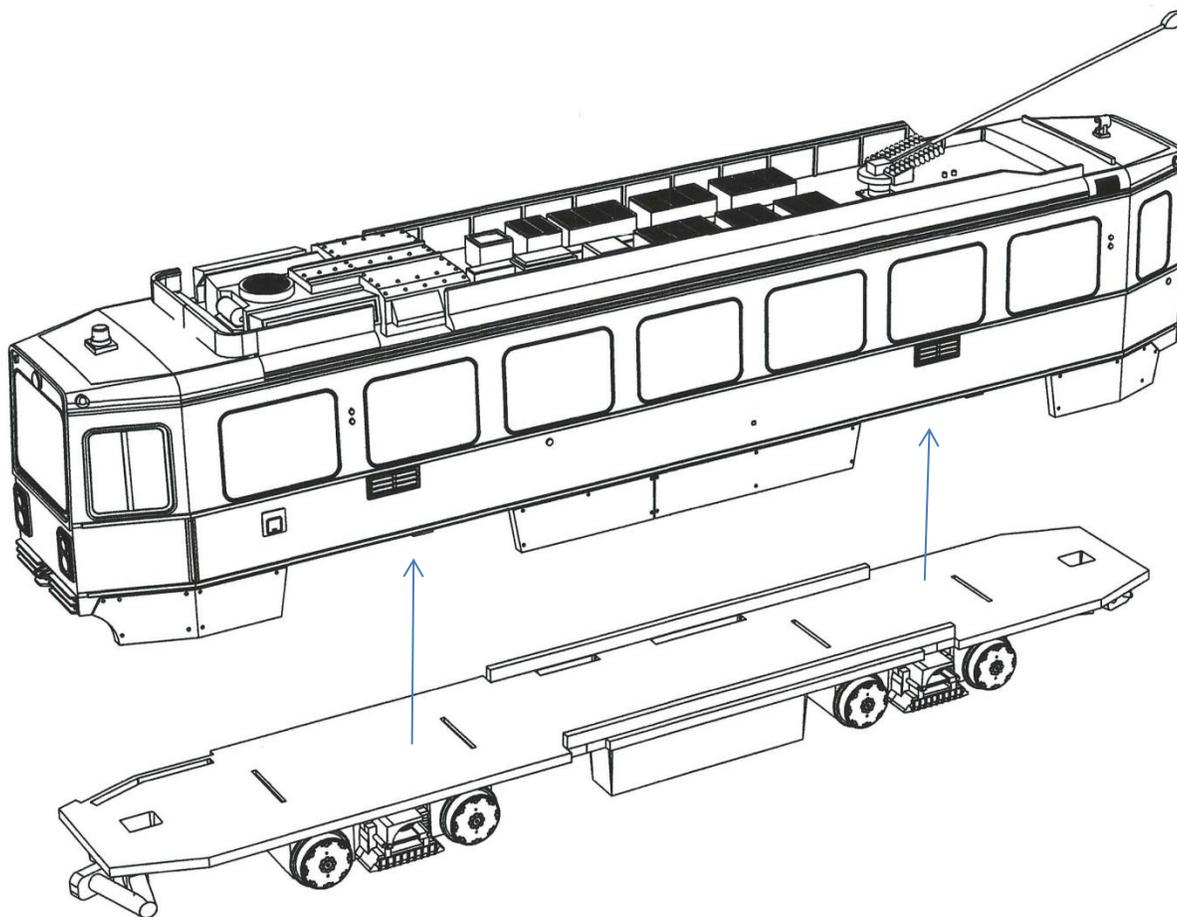

Frame snaps into body shell using window inserts to hold in frame, and frame helps hold in windows.

Before painting, wash all parts in soap and water and allow to air-dry.

Models can be powered using IHP 3D-printed plastic frame, available from our Shapeways page, and the Bowser #125100 mechanism. Bowser's new trolley pole can also be used, and its brass bushing fits the IHP roof pole mount.

©2015 IHP, PO Box 487, Wynnewood, PA 19096 <http://ihphobby.tripod.com>

05/15