



87206 HO Kawasaki Double-End LRV Body Kit

1) Window Inserts

Cut apart and modify to get the pieces as shown.

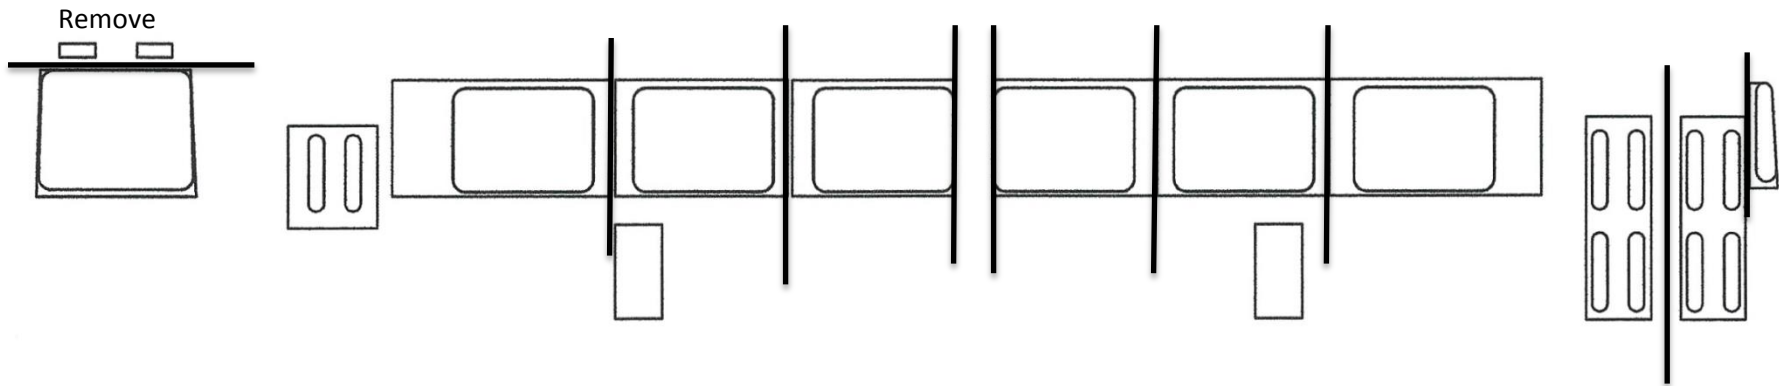

2) Installation of Window Inserts

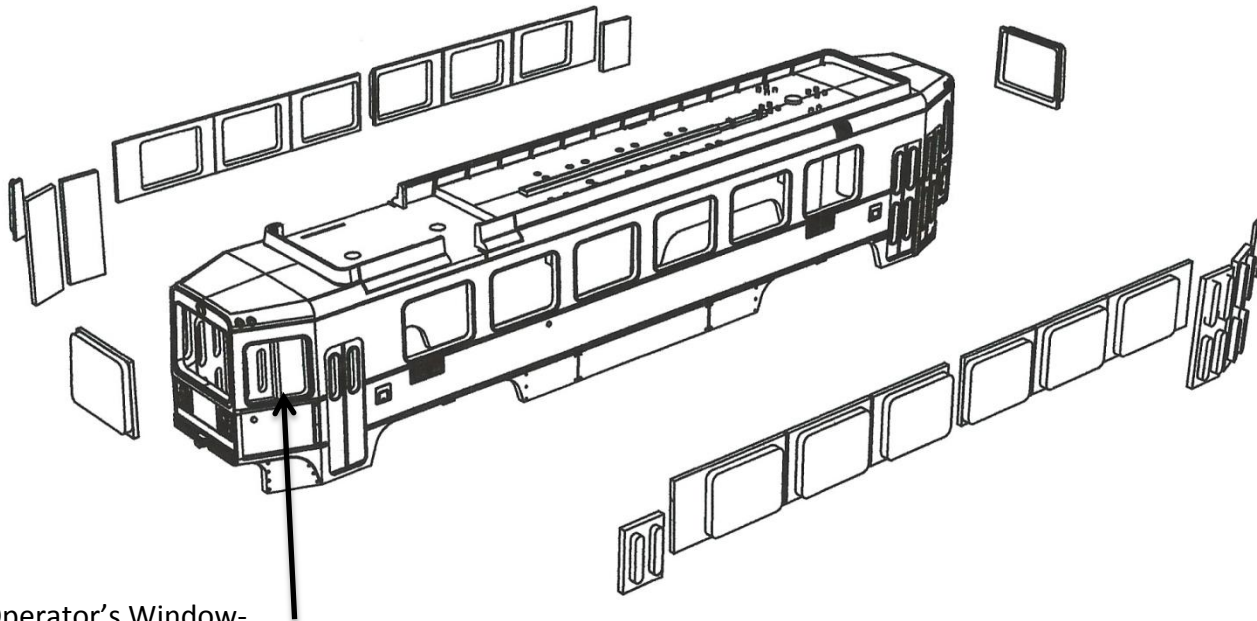

Operator's Window-
Make From Clear Acetate and install from inside