


87201 HO Budd M3 Single-Unit Body Assembly

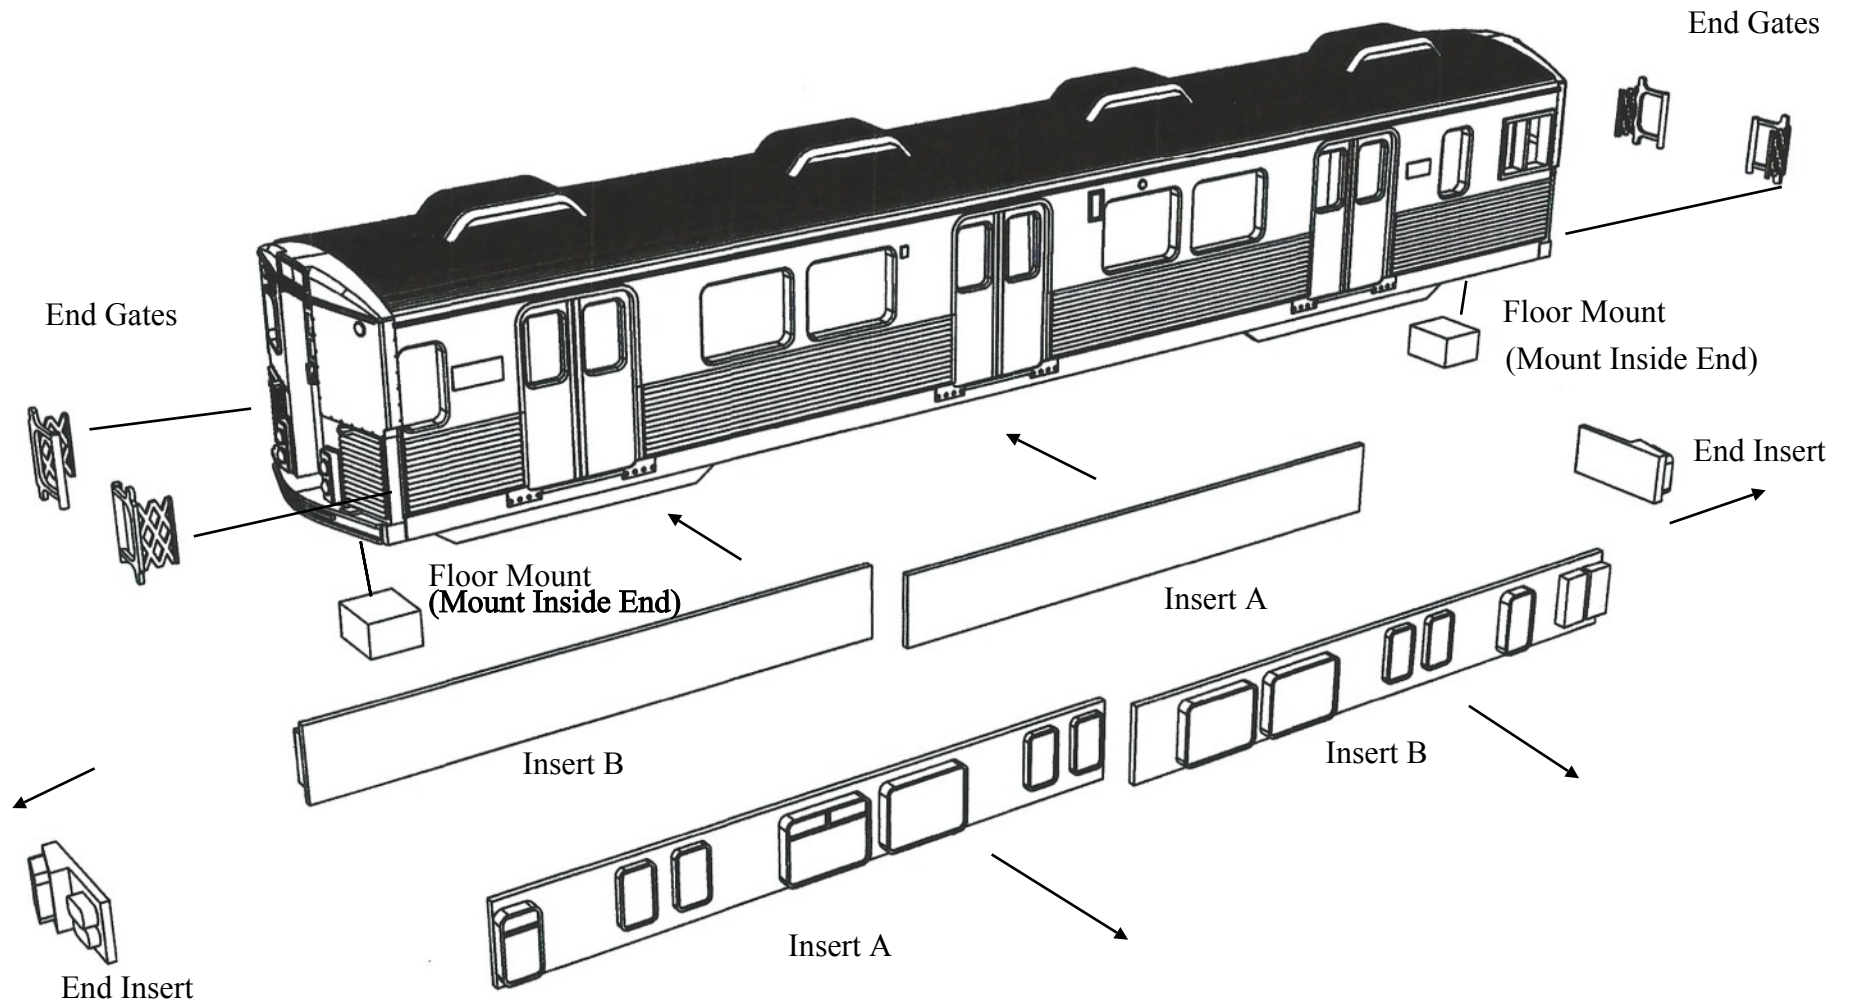

Window Inserts may be broken up if the fit of the whole piece is too tight.
Use 3 2-56 screws to mount frame to shell
Contact IHP for any assistance or suggestions.