


HO Budd R32

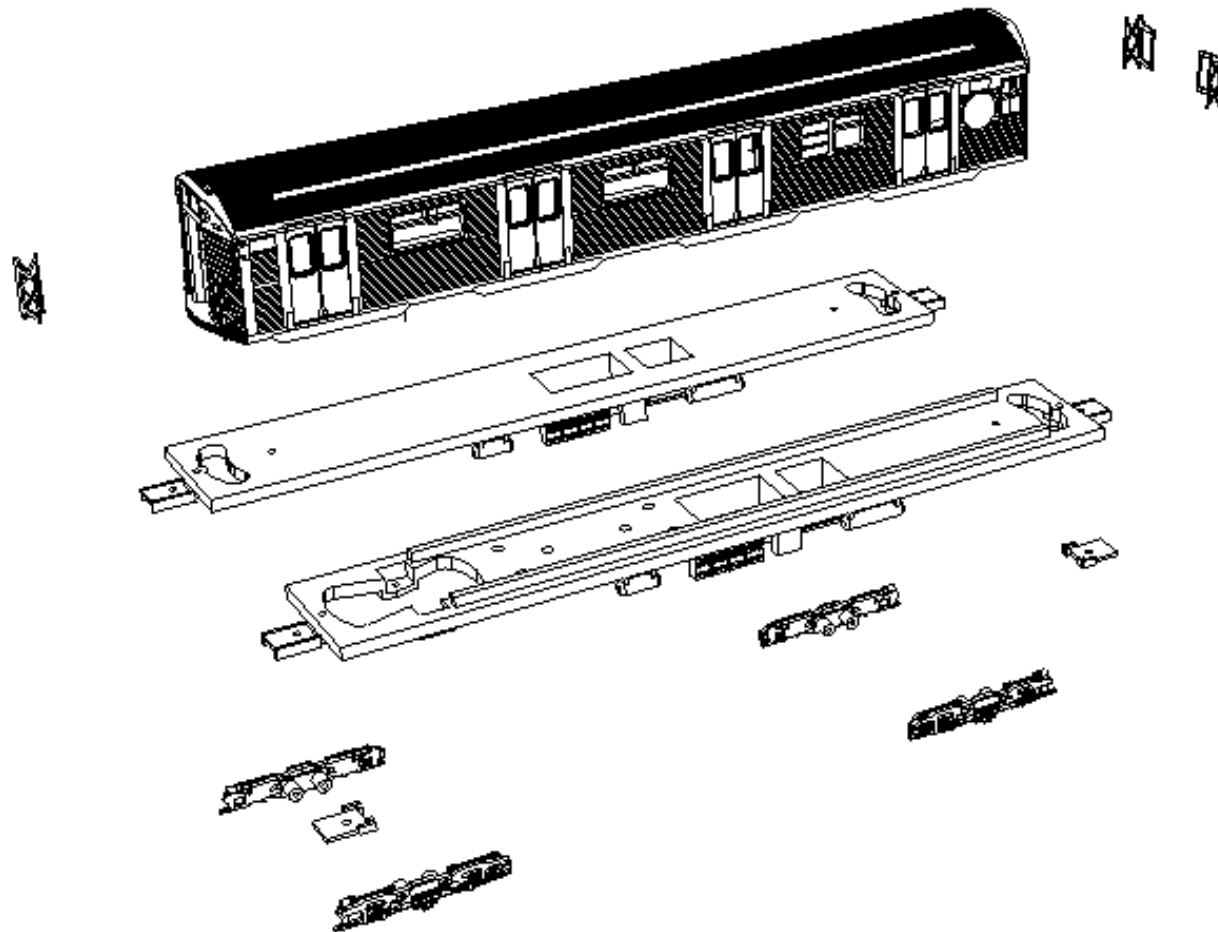

Use Bowser #125115 mechanism for powered cars. Use Bowser trailer trucks with 33" wheels for nonpowered cars. Truck sideframes fit Bowser trucks. Use 2/56 screws (included with body shells) to attach frame to body. Use 2-56 screws (not included) to attach coupler pockets. Paint Body Shell a bright silver paint (chrome or flaky metallic paints are not recommended) and glue end gates to body after painting.