


Budd Silverliner II Window Installation

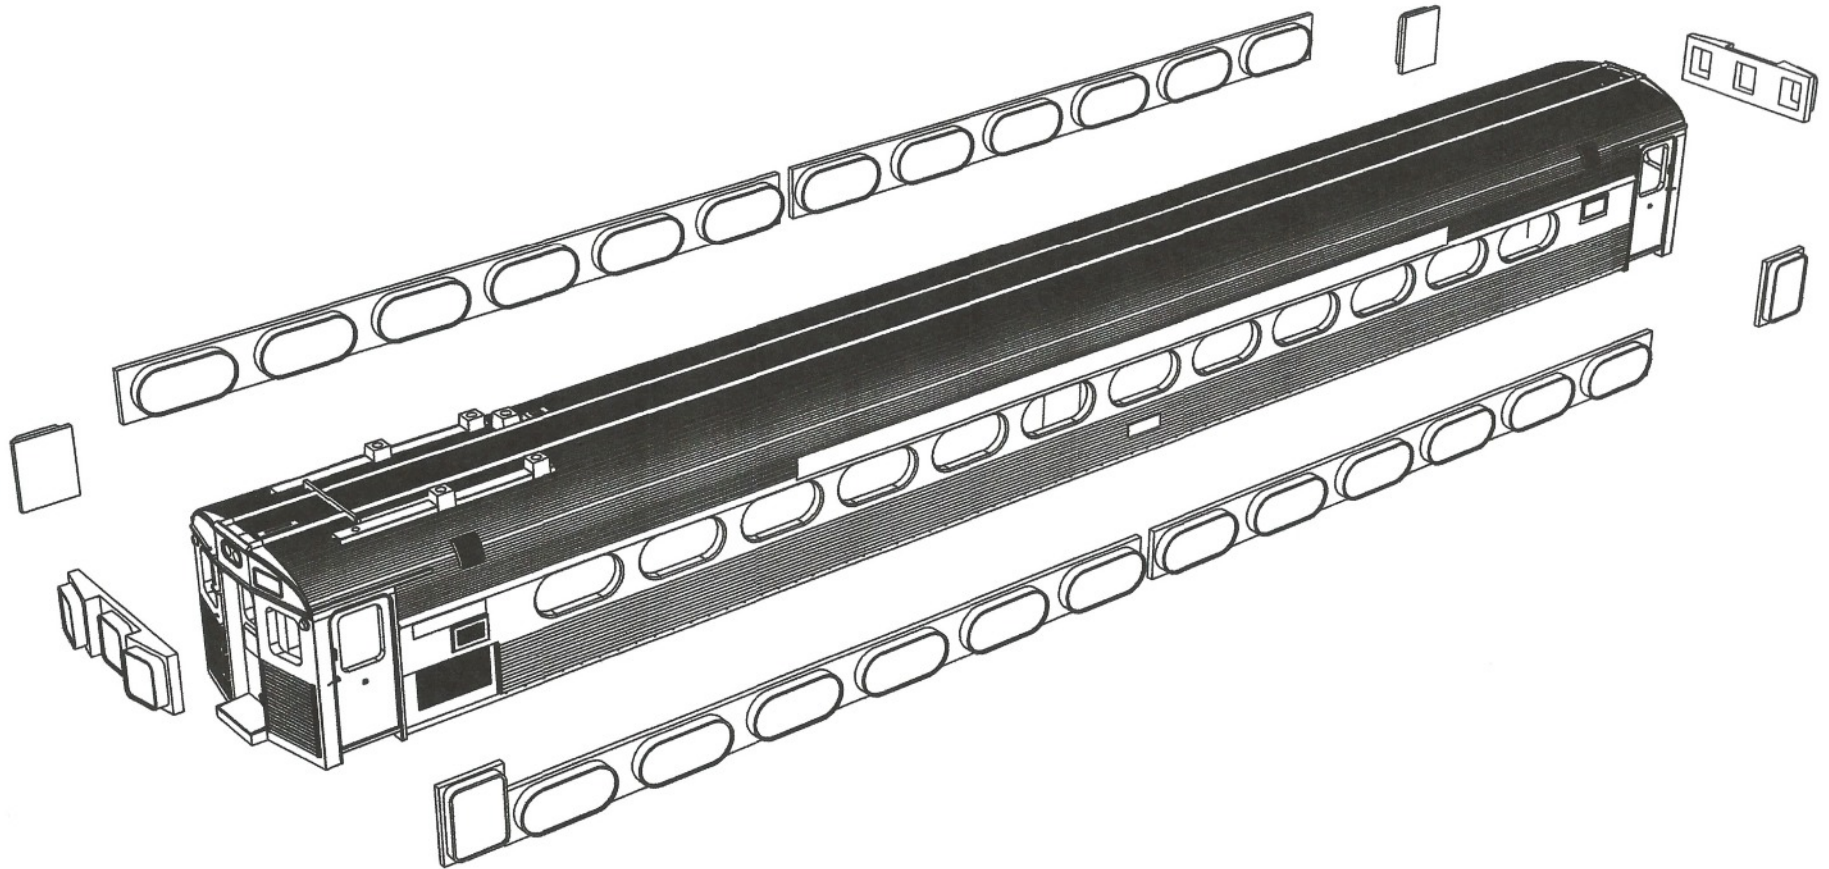

Paint the body first. We recommend a bright silver color (not a chrome or flaky metallic finish) from a spray can.

Windows are installed from the inside.

For best results, window strips (side and end) should be broken into individual windows for installation. End windows may require a little trimming to fit between side and end door framing. Secure windows from inside with a little super glue. A little on the exposed bottom edge is enough, and it will work its way around the window seam.