


Budd Silverliner II Roof Details

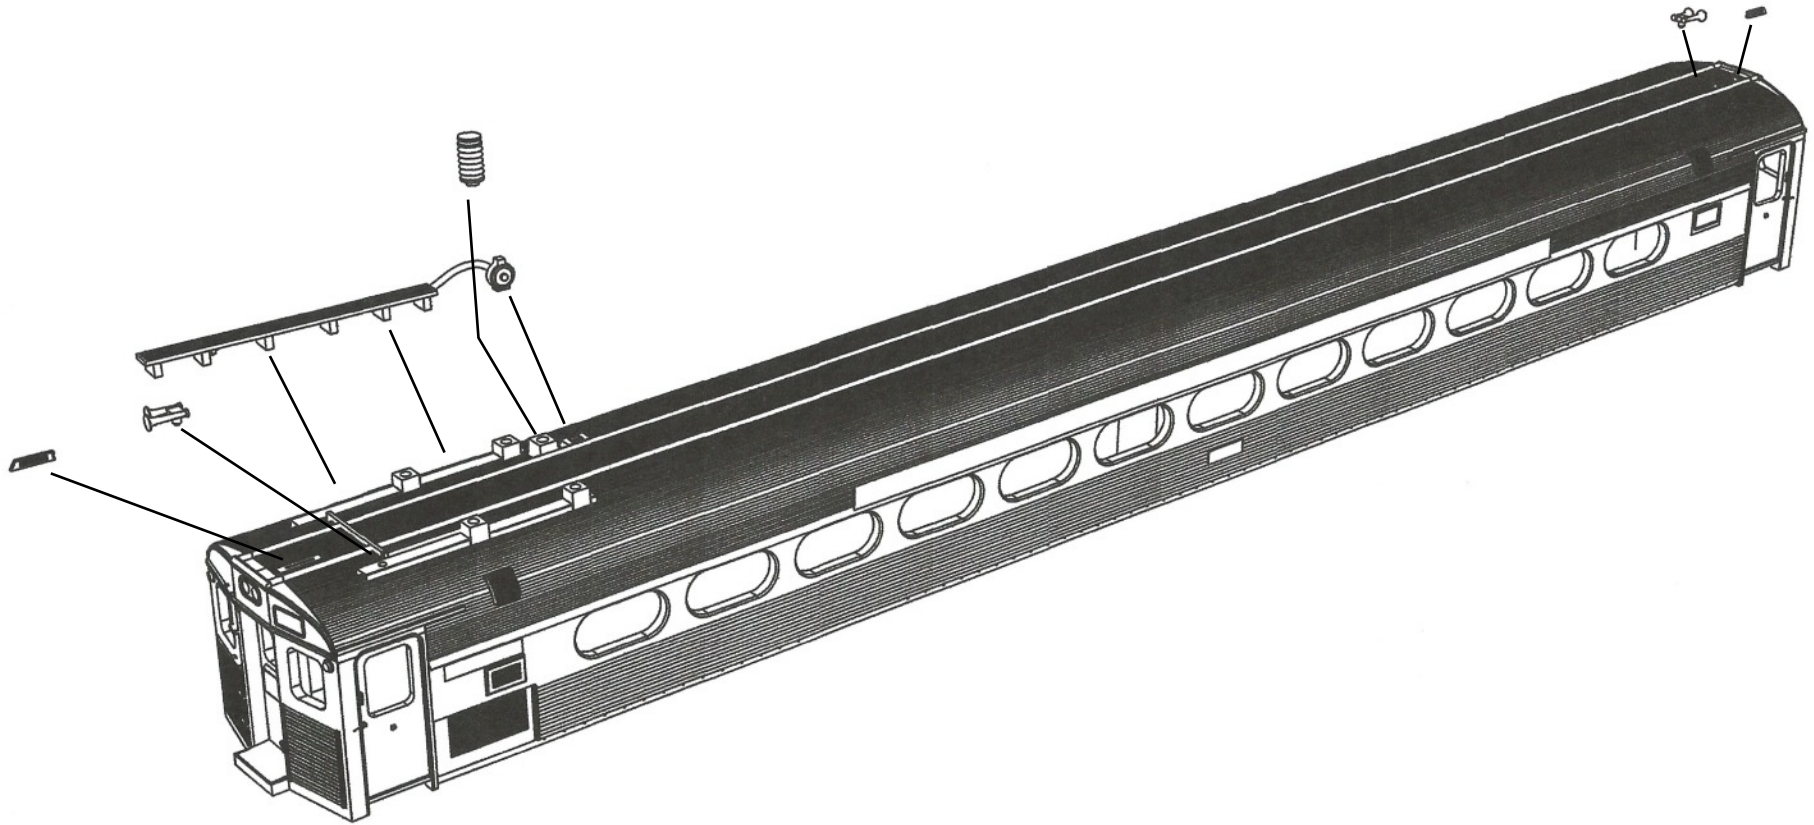

NOTE: Roof Detail Parts are printed in fine detail plastic and should be handled carefully to avoid breaking them.

Clean the parts by placing them in a small plastic ziplock bag with some Bestine thinner, and gently shake the bag. Rinse the parts and allow them to air-dry before installation and painting.

For the horns, drill out the mounting holes a little if necessary to make them fit. Don't press them in firmly; they may break.