


## Budd Silverliner II Pioneer III Trucks

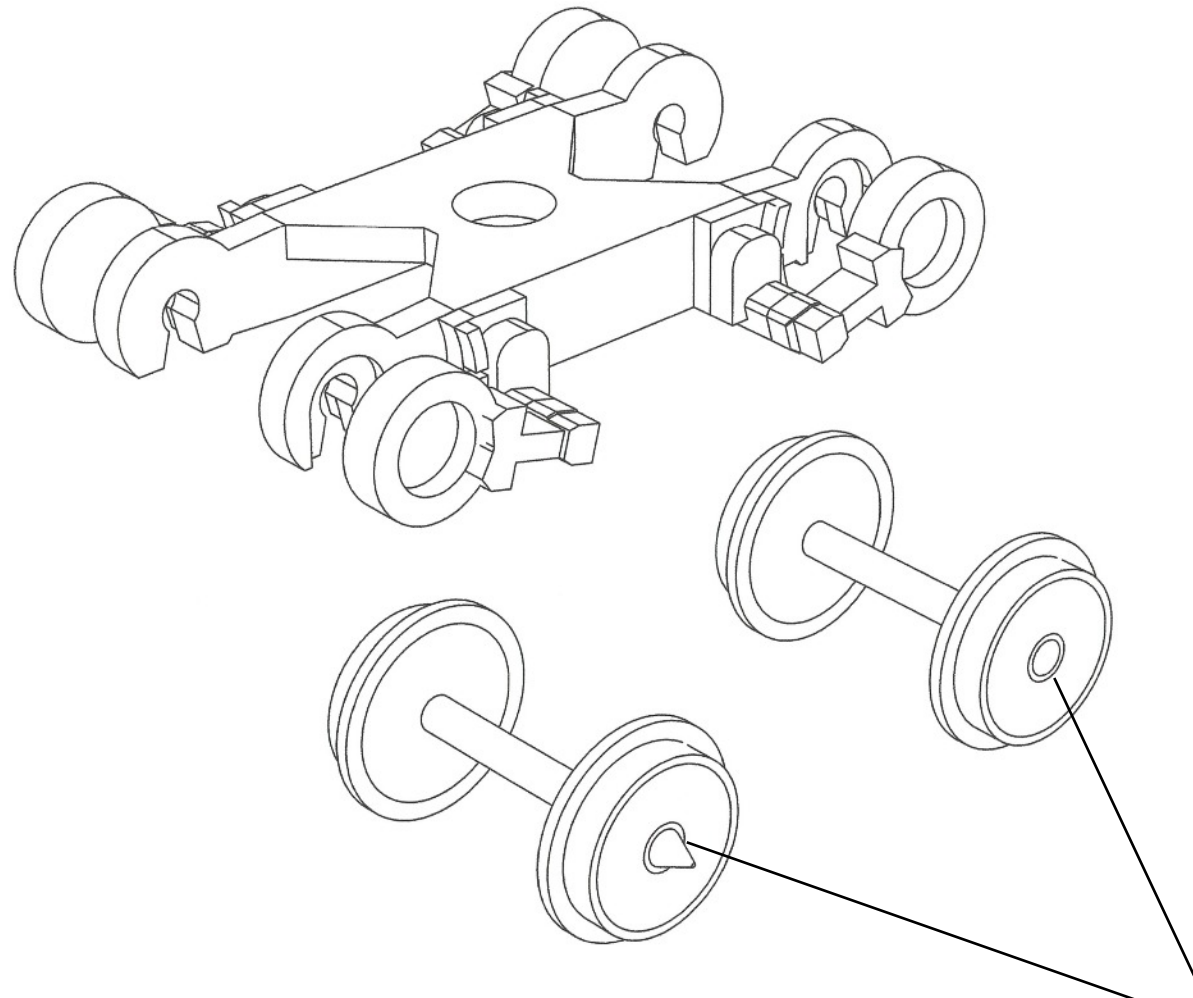

**Use Bachmann Spectrum 33" wheelsets. Remove journal end points by filing them off with a large flat file.**

**Install wheelsets by snapping them in place. Make sure the insulated side fits in the pocket on the truck bearing on one side.**