


IHP HO CLRV Assembly Instructions

Remove
Dividers for
Clear
Inserts

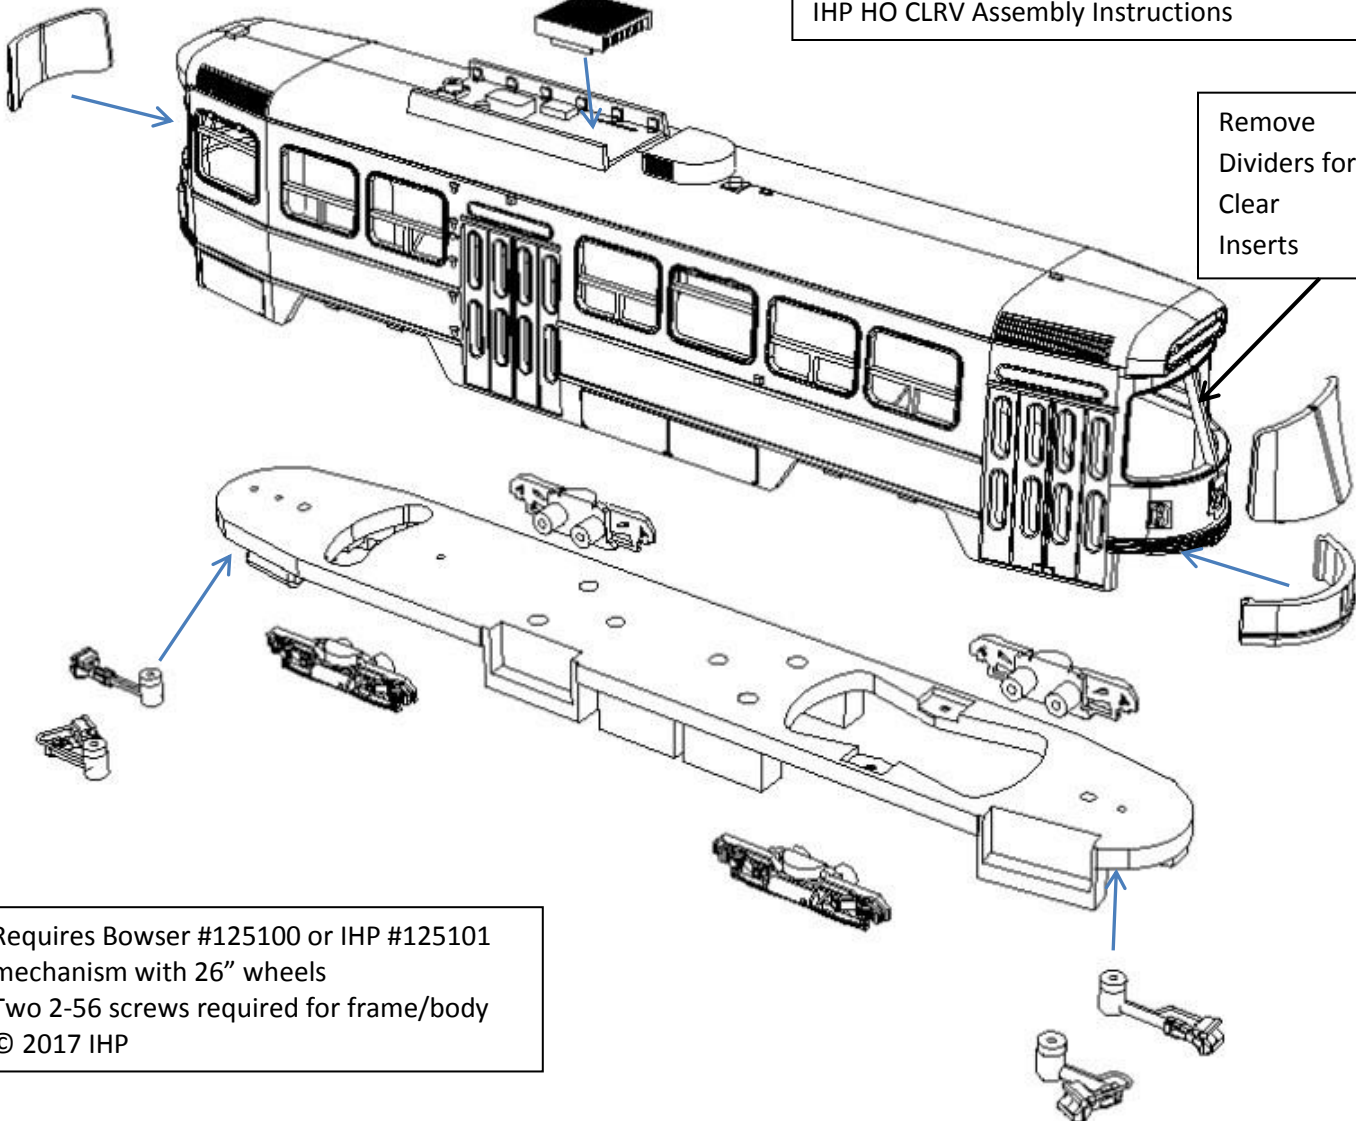

Requires Bowser #125100 or IHP #125101
mechanism with 26" wheels
Two 2-56 screws required for frame/body
© 2017 IHP